







If you want to re-polish the cutter, only remove the cutter unit with a screwdriver.

Cutter unit is removable!

Don't need to remove the body from the head!

You never do parallel regulation again!

You charge cutter without waiting!

